


# OCS1830 Chainsaw XXX

5133002829 - OCS1830 - 4000462115



# RYOBI

## 4000462115

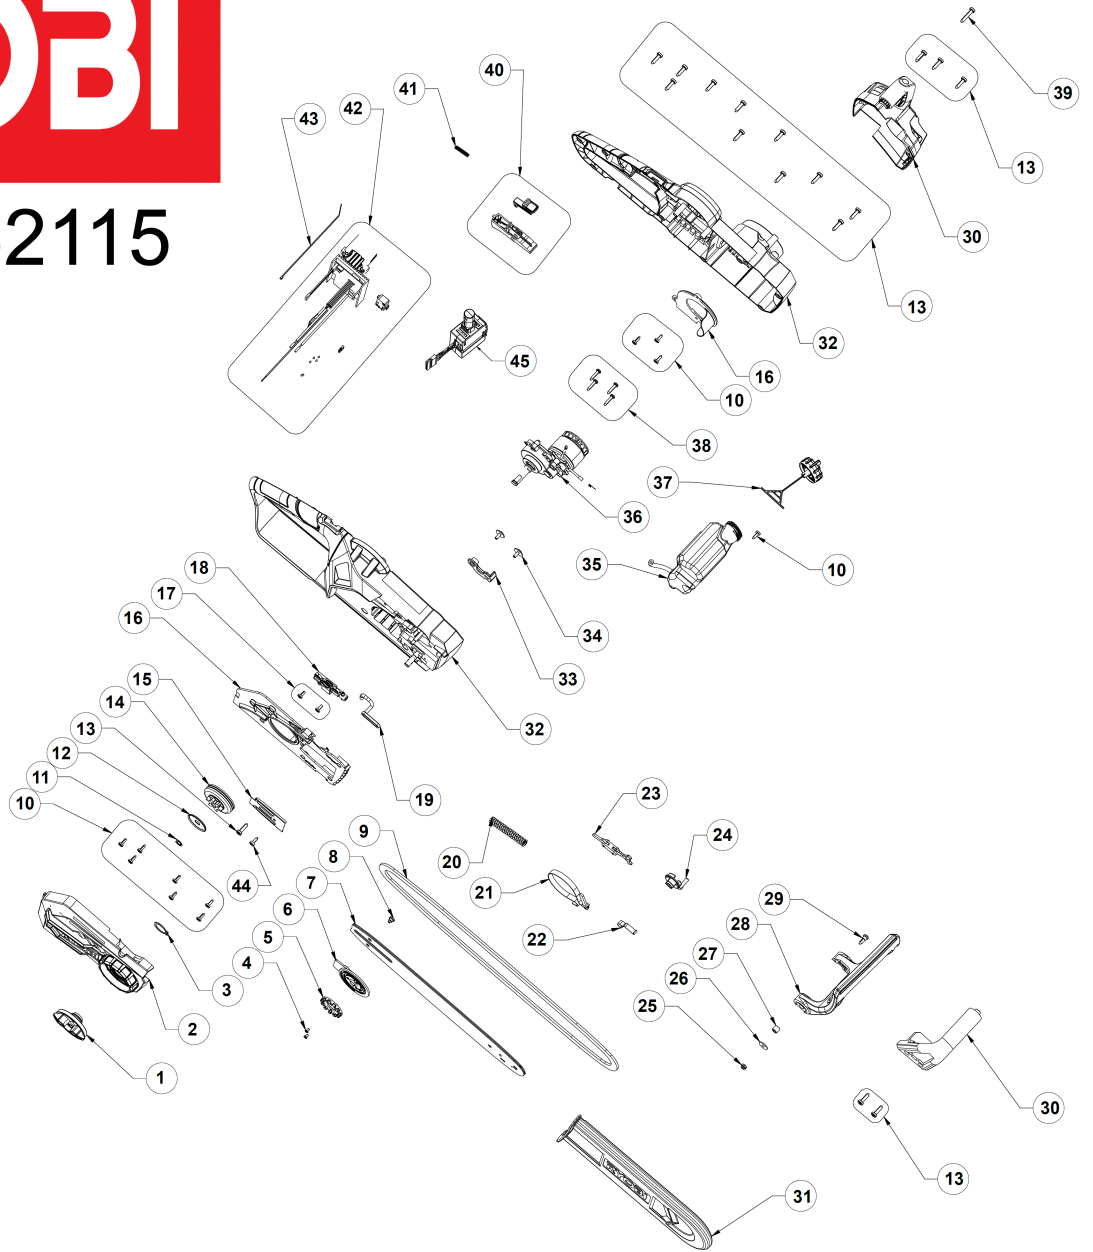

Position	Quantity	Description	Part number	EAN
1001	1	TURNING KNOB	5131040119	4058546051815
1002	1	COVER	5131040120	4058546051822
1003	1	RING	5131036228	4058546156039
1004	2	SCREW	5131036229	4058546156046
1005	1	ADJUSTABLE SEGMENT	5131040121	4058546051839
1006	1	ROTARY SLIDER	5131040122	4058546051846
1008	1	SCREW	5131037424	4002395283422
1010	11	SCREW	5131036253	4058546156244
1011	1	CLIP	5131036231	4058546156053
1012	1	WASHER	5131036232	4058546156060
1013	17	SCREW	5131040123	4058546051853
1014	1	CLUTCH DISC	5131040124	4058546051860
1015	1	PLATE	5131040125	4058546051877
1016	1	COVER	5131040126	4058546051884
1017	2	SCREW	5131036241	4058546156145
1018	1	OIL PUMP	5131015980	4058546103071
1019	1	RUBBER	5131036243	4058546156152
1020	1	SPRING	5131040127	4058546051891
1021	1	BRAKE DISC	5131040128	4058546051907
1022	1	SPRING	5131036267	4058546156381
1023	1	YOKE	5131040129	4058546051914
1024	1	TRANSITION PIECE	5131040130	4058546051921
1025	1	NUT	5131040131	4058546051938
1026	1	WASHER	5131040132	4058546051945
1027	1	BUSHING	5131036266	4058546156374
1028	1	HAND GUARD	5131040133	4058546051952
1029	1	SCREW	5131036273	4058546156442
1030	1	COVER	5131040134	4058546051969
1031	1	SCABBARDS	5131040135	4058546051976
1032	1	HOUSING	5131040136	4058546051983
1033	1	CONNECTOR	5131040137	4058546051990
1034	2	SCREW	5131033545	4002395148479
1035	1	TANK	5131040138	4058546052003
1036	1	MOTOR	5131040139	4058546052010
1037	1	CAP	5131040140	4058546052027
1038	4	SCREW	5131035603	4058546150105
1039	1	SCREW	5131036274	4058546156459
1040	1	TRIGGER	5131040141	4058546052034
1041	1	SPRING	5131036245	4058546156176
1042	1	ELECTRONIC	5131040142	4058546052041
1043	1	CLAMP	5131000000	
1044	1	SCREW	5131040143	4058546052058
1045	1	SWITCH	5131043737	4058546350970
1007	1	RAC226 30CM BAR FOR RCS36 EMEA	5132002486	4892210814333
1009	1	RAC227 REPLT CHAIN FOR RCS36 EMEA	5132002436	4892210813510